



Warning!

- You can use the Weego TWIN for children starting at 3 lbs.
- Use the twin, until the twins become too heavy for you.
- With premature babies ask your pediatrician before using the Weego TWIN.
- Small children can fall through a leg hole. Be sure to follow manufacturer's instructions for use and adjust inner pouch leg holes to the smallest size possible.
- Only use when worn by an adult!
- Never use in a car!
- Always use the Weego TWIN with two babies
- Always keep inner and outer pouch zippers fully zipped!
- Always keep inner and outer pouch buckles and snaps fastened during use!
- Keep instructions handy for future use.


Any more questions?

Then please contact us at:

Weego Babytragesäcke
Breisgauer Str. 13 14129 Berlin
Tel.: + 49 - (0)30 - 80 10 92 62
Fax: + 49 - (0)30 - 80 10 92 64
E-mail: info@weego.de

Instructions for use

Please read carefully before use!

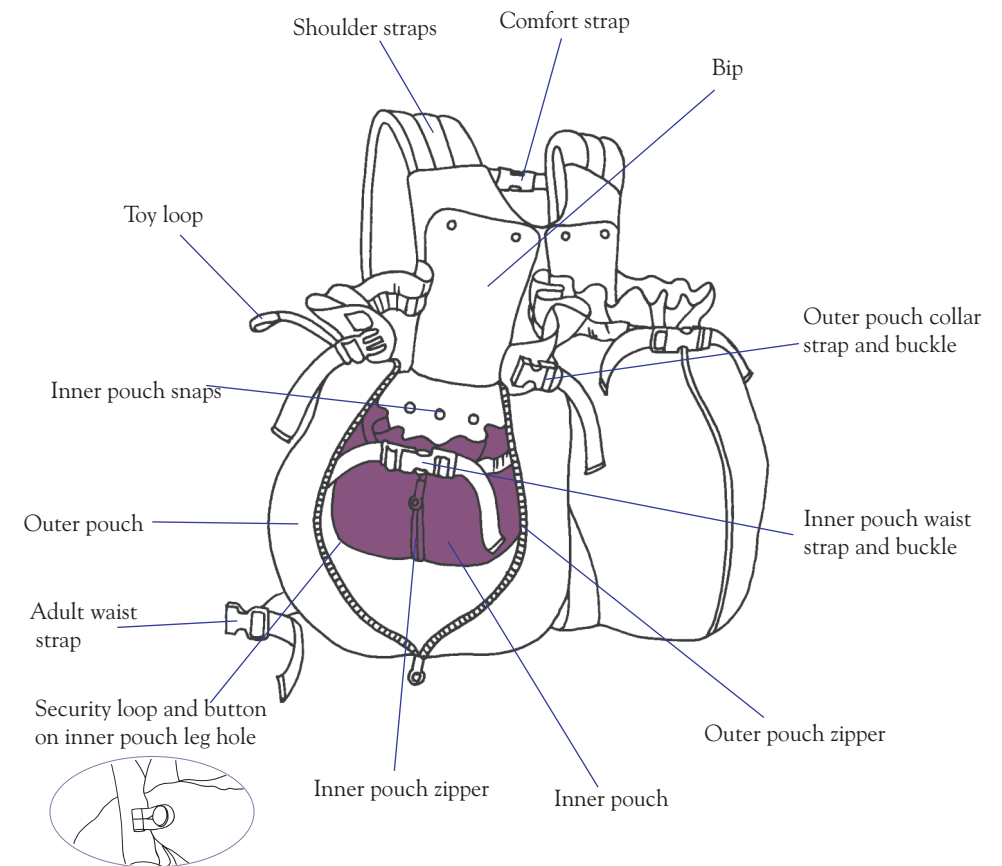

How to use the Weego TWIN



1. Adjust the height of the inner pouch according to the size and weight of your baby (-> see “How to use the inner pouch snaps”).
2. Put your arms through the shoulder straps. Grasp the comfort straps behind your head and snap the buckle **A**. Fasten the waist strap and adjust to fit snugly. Adjust shoulder straps so the carrier fits high on your chest. Adjust the comfort strap for a snug fit.




3. With both, inner and outer pouch completely opened, holding the first baby facing in, gently pull baby's legs through the leg holes of the inner pouch. Fasten buckle and then zip the inner pouch closed.
4. Close the buckle on the outer pouch collar. Then adjust the inner pouch waist strap so the inner pouch fits snugly around your baby's waist. Zip the outer pouch and adjust collar strap to cradle your baby's head.




5. Repeat steps 3. and 4. with the second baby.
6. Make sure your babies ride high on your chest **C**. Adjust shoulder straps and waist strap again if necessary.
7. For older children, guide the the babies' arms and legs through the holes in the outer pouch **D**.

Helpful Hint

If your babies are small and the outer pouch appears too big, fold the collar over to support the baby's head.

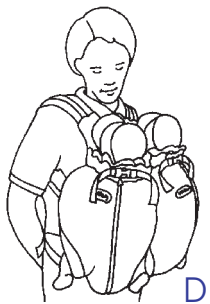

How to use the security buttons and loops

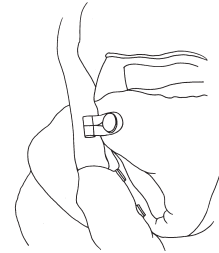

For infants weighing less than 8 pounds (3,6 kg), fasten the security loops and buttons on each of the inner pouch leg holes to ensure that your babies cannot slip through the leg holes. Open the leg holes after your babies weigh 8 lbs.

How to use the inner pouch snaps

Using the inner pouch snaps always adjust the height of the inner pouch according to the size of your babies:

- Before babies can support their heads by themselves the head should always be supported by the outer pouch's collar. So the inner pouch height has to be chosen so that the outer pouch collar strap supports babies head.
- To change the height of the inner pouch:
Lay the Weego TWIN flat and fasten the inner pouches to the appropriate row of snaps. Make sure all four snaps are fastened.